

## Map Timers to Relays:

---

1. From the home screen, press ► EDIT
2. Press ► TIMERS , then Press ► TIMER/RELAY CONTROL
3. Press ► TIMER/RELAY
4. Press ▼ or ▲ to select the timer that will control the relay, then Press ► RELAY to select relay, then press ▼ or ▲ to select the relay.
5. Press ► ACTION to select the action, then ▼ or ▲ to select the action
6. Do the above for each relay being controlled by each timer

## Map Timers to Groups:

---

1. From the home screen of the Network Controller, press ► EDIT
2. Press ► TIMERS, then Press ► TIMER/RELAY CONTROL
3. Press ► TIMER/GROUP
4. Press ▼ or ▲ to select the timer that will control the relay, then Press ► GROUP to select the group, then press ▼ or ▲ to select the Group
5. Press ► ACTION to select the action, then ▼ or ▲ to select the action



# LightLEEDer Quick Reference Guide

*This Quick Reference Guide will help you program a few basic settings in the lighting system before it is programmed by a field technician. Refer to the LightLEEDer Operators Manual and the Quick Installation Guide for more information on how to install, test, and program this system.*

## Configure a LightSync Switch:

---

1. From the home screen, press ► EDIT, then Press ► INPUTS
2. Press ▼ or ▲ to select the device address number
3. Press ► CONFIGURE DEVICE
4. Press ▼ or ▲ to select the switch type.
5. Press BACK, then CONFIGURE INPUTS
6. Press ▼ or ▲ to select the switch input. (each switch input per device requires a Type setup)
7. Press ► TYPES, then TYPES A/B, then TYPE A
8. Press ▲ to select the switch input type PB ON/OFF

## Map a LightSync Switch Input to Control a Relay or Group:

---

1. From the home screen, press ► EDIT Press ► RELAYS, then Press ► INPUT MAPPING
4. Press ► LOCAL/RELAYS or LOCAL/GROUPS (see next section to set-up Groups)
5. Press ▼ or ▲ to select the LightSync input device address
6. Press ► INPUT and RELAY
7. Press ▼ or ▲ to select the LightSync Input and Relay
8. Press ► ACTION
9. Press ▼ or ▲ to select the action ON, OFF, or ON-OFF

## Configure Relay Groups:

---

1. From the home screen, press ► EDIT
2. Press ► RELAYS, then Press ► GROUP RELAYS
3. Press ▼ or ▲ to select the group desired
4. Press ► GROUP, then press ▼ or ▲ to select the Group
5. Press ► RELAY, then press ▼ or ▲ to select the Relay
6. Press ► INCLUDE to toggle between YES and NO

## Set the Clock:

---

1. From the home screen, press ► EDIT
2. Press ► CLOCK, then Press ► TIME/DATE
3. Press ► TIME, then press ► HOUR or MINUTE and use the ▼ or ▲ to buttons to make adjustments to either. Be sure that AM/PM is indicated properly for the time of day.
4. When the time is correct, press ► SET
5. If the date requires adjustment press ► DATE, then select MONTH, DATE, or YEAR and press ► the corresponding button then press ▼ or ▲ to adjust the values
6. When the time is correct, press ► SET

## Configure Normal Timers:

---

Typically you will need to program 2 timers, one to turn relays ON and one for OFF.

1. From the Network Controller or single panel (standalone) home screen, Press ► EDIT
2. Press ► TIMERS
3. Press ► CONFIGURE TIMERS
4. Press ▼ or ▲ to select 1 of the 128 timers
5. Press ► TIME
6. Press ► NORMAL
7. Press ▼ or ▲ to change the hour. Be sure that the hour is set to AM/PM desired
8. Press ► MINUTE
9. Press ▼ or ▲ to change the minute