

Troubleshooting Guide

LightSync Line Voltage Dimmer

LS LVD Part #93000836

No power to dimmed loads

- Check Output fuses.
- Are Dimmers and Relays properly configured?
- Is there proper voltage from the Transformer? 24vac Red to Red, 12vac Red to Yellow.
 - If no voltage check Line In fuse.

Communication Issues

- Is the Module addressed correctly?
- Are Data Cables connected to correct In/Out ports and seated properly?
 - Test Data Cables for damage and verify data cables are terminated properly (T568B standard) using a cable tester.
- Module will not function without LightSync Device power from Data cable.

